



Green



Flogal



Czystal





Pituals



Balm



Lips

Collection Huiles Florales

• Bouquet Sublime - p.6



Collection Baunes

- Balm-in-Oil p.8
- Cleansing Balm-in-Oil p.10

Collection Sticks

- Clear Lipstick p.12
- Clear Magic Stick p.14
- Clear Sunstick p.16
- Clear Perfurmed Stick p.18

Collection Lips

- Healthy Glow Gel p.20
- Defying Gravity p.22
- Le Rouge p.24
- Lip Tint p.26

Collection Pituels

- Rituel du Tigre p.28
- Rituel Ayurvédique p.30
- Rituel d'Orient p.32
- Rituel Marin p.34
- Rituel de la Reine de Saba p.36







Cosmetic formulation is more than science, it's goldsmithing. Finding the perfect balance and achieving the perfect texture both visually and sensorially is a constant challenge.

After more than two years under pandemic, we have decided to gather in this guide, collections that will inspire you, while meeting the expectations of formulators and consumers.

Our collections are designed around a theme or a concept for an immersive experience made possible by the use of our polymers.

Discover minimalist formulas than can be easily customized with the perfume, active or colors of your choice.

Let yourself be transported into a world where beauty rhymes with well-being and naturalness with perfomance.

Adrien Faure

Grades









Trade Name	INCI Name	ION ISO16128	Process temperature	World Compliance
EstoGel®Green	Hydrogenated Castor Oil/ Sebacic Acid Copolymer	1	80°C	All countries
EstoGel [®] Green40	Caprylic/Capric Triglyceride (and) Hydrogenated Castor Oil/Sebacic Acid Copolymer	1	80°C	All countries
EstoGel [®] M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	0.91	100°C	All countries
EMC30	Caprylic/Capric Triglyceride (and) Castor Oil/IPDI Copolymer	0.97	80°C	All countries
ExpertGel® EG312	Poloxamer 338 (and) PPG-51/ SMDI Copolymer	0	Cold	All countries
ExpertGel® EG412	Poloxamer 407 (and) PPG12/ SMDI Copolymer	0	Cold	All countries

Bouquet sublime



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	EMC30	Caprylic/Capric Triglyceride (and) Castor Oil/IPDI Copolymer	POLYMEREXPERT	1,60
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	0,50
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	10,00
Α	DUB 810	Coco-Caprylate/Caprate	STEARINERIE DUBOIS	25,00
Α	DUB IPP	Isopropyl Palmitate	STEARINERIE DUBOIS	25,00
А	SUNFLOWER OIL	Helianthus Annuus (Sunflower) Seed Oil		32,00
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	5,00
В	PETALS			0,20
С	COLORANTS			0,30
D	PARFUM FLEUR DE COTON	Fragrance	MANE	0,40

- Introduce the ingredients of the PHASE A in a vessel
- 2. Heat to 80°C under stirring
- 3. At 80°C, stir for 30 minutes until the blend is perfectly transparent and uniform
- 4. Cool to room temperature under stirring
- 5. Introduce the remaining ingredients and homogenize with slow stirring
- 6. Pour into a suitable packaging

Bouquet suplime

Discover a concentrated nutrition oily serum. This sublime bouquet uses the combination of EMC30 and EstoGel®Green. The alliance of the two materials makes it possible to texturize the oily complex without affecting its fluidity. Indeed, EstoGel®Green brings flexibility to the complex and EMC30 structures the drop, which makes it particularly easy to use in dropper-type packaging.

Beyond the nutritive benefits of this serum, it seduces by its transparency and its suspending properties. The product becomes a piece of art that, beyond its cosmetic properties, charms the consumer with each and every use.



Balm-in-oil



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	2,00
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	2,00
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	37,35
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	37,00
В	BEESWAX	Beeswax		8,00
С	CETIOL SB 45	Butyrospermum Parkii (Shea) Butter	BASF	8,00
D	SUNSIL 150H	Silica	IMPAG	5,00
Е	SUNSHINE SOFT BRONZE	Synthetic Fluorphlogopithe (and) Iron Oxides	MAPRECOS	0,10
Е	SUNSHINE SUPER GLITTER BRONZE	Synthetic Fluorphlogopithe (and) Iron Oxides	MAPRECOS	0,05
F	PARFUM MONOI ENSOLEILLE	Fragrance	MANE	0,50

- Introduce the ingredients of the PHASE A in a vessel
- 2. Heat to 100°C under stirring
- 3. At 100°C, stir for 30 minutes until the blend is perfectly transparent and uniform
- 4. Cool to 80°C
- 5. Introduce the wax and homogenize
- 6. Cool to 65°C

- 7. Introduce the butter and homogenize
- 8. Introduce the silica and homogenize
- 9. Introduce the glitters and homogenize
- 10. Introduce the fragrance and homogenize
- 11. Pour into a suitable packaging

Balm-in-oil

The Balm-in-oil combines EstoGel®M and EstoGel®Green to use the mechanical properties of each.

This allows to navigate in a structure that is both strong and flexible. Thus, the galenic allows to obtain something unique and balanced. This nourishing and sublimating balm comes to repair and nourish the skin, it is for example ideal as after-sun.

Its finger picking allows to appreciate an elegant and creamy transformation texture and thanks to the use of silica, we obtain a dry and powdery touch.

This product is anhydrous and without preservatives.



POLYMEREXPERT

Puting innovation first

Cleansing balm—in—oir

HASE TRADE NAME INCLINAME

PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	2,50
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	2,50
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	32,85
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	31,50
Α	JOLEE 7750	Isoamyl Laurate	OLEON	10,00
В	BEESWAX	Beeswax		9,00
С	CETIOL SB 45	Butyrospermum Parkii (Shea) Butter	BASF	7,00
D	DERMOFEEL GO SOFT	Polyglyceryl-2 Sesquioleate	EVONIK	4,00
E	PAPRIKA BIO EXTRACTIVE	Helianthus Annuus Hybrid Oil (and) Capsicum Annuum Fruit Extract (and) Rosmarinus Officinalis Leaf Extract	BOTANICA	0,15
F	PARFUM MONOI ENSOLEILLE	Fragrance	MANE	0,50

- Introduce the ingredients of the PHASE A in a vessel
- 2. Heat to 100°C under stirring
- 3. At 100°C, stir for 30 minutes until the blend is perfectly transparent and uniform
- 4. Cool to 80°C
- 5. Introduce the wax and homogenize

- 6. Cool to 65°C
- 7. Introduce the butter and homogenize
- 8. Introduce the PHASE D and homogenize
- Introduce the paprika extract and the fragrance and homogenize
- 10. Pour into a suitable packaging

Cleansing balm-in-oil

This cleansing balm combines EstoGel®M and EstoGel®Green. The mechanical properties of the two ingredients are combined to create a structure between a hard gel and a flexible gel. The texture obtained is melting, light and easy to remove.

This cleasing balm-in-oil allows to remove the make-up without irritating and contains a surfactant which allows to the product to be rinsed off. This balm does not contain any powders which confers a more opalescent color to it.

Finally, this product is anhydrous and without preservatives

Clear lipstick



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	28,00
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	10,00
А	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	48,50
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	8,00
Α	LUSPLAN DD-DA7	Dimer Dilinoleyl Dimer Dilinoleate	NIPPON FINE CHEMICAL	4,00
В	COPHEROL 1250 C	Tocopheryl Acetate	BASF	0,50
В	PARFUM VANILLE GOURMANDE	Fragrance	MANE	0,50
В	COLORANT			0,50

- Introduce the ingredients of the PHASE A in a vessel
- 2. Heat the blend under stirring at 100°C
- 3. At 100°C, stir for 30 minutes until the blend is completely uniform and transparent
- 4. Cool to 80°C
- 5. Add the ingredients of the PHASE B and homogenize
- Pour into a mold or a suitable packaging

Clear lipstick

Let yourself be transported by this transparent stick formulated with 28% EstoGel®M and 10% EstoGel®Green. The particular structure of this stick is obtained by the synergy of EstoGel®M which forms hard and brittle gels and EstoGel®Green which forms flexible gels.

This transparent balm will gently give a glossy effect on your lips.



Clear magic stick



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	28,00
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	10,00
Α	DUB 810	Coco-Caprylate/Caprate	STEARINERIE DUBOIS	39,60
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	14,80
Α	JOLEE 7750	Isoamyl Laurate	OLEON	7,00
В	CITRIC ACID	Citric Acid		qsp
В	UNICERT K7061-J	CI 45380	SENSIENT	0,20
С	PARFUM VANILLE GOURMANDE	Fragrance	MANE	0,40

- 1. Introduce the ingredients of the PHASE A in a vessel
- 2. Heat the blend under stirring at 100°C
- 3. At 100°C, stir for 30 minutes until the blend is completely uniform and transparent
- 4. Cool to 80°C
- Add the premix of the PHASE B and homogenize
- 6. Introduce the fragrance and homogenize
- Pour into a mold or a suitable packaging

Clear magic stick

It's not science, it's magic!

This magic stick adapts to the shade of your lips to beautify them. Made of EstoGel®M and EstoGel®Green to obtain a flexible shape, this stick allows a perfect glide on application for an unequivocal sensoriality and allows a stability at every moment.







PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	30,00
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	10,00
Α	CETIOL B	Dibutyl Adipate	BASF	11,40
Α	DUB DIPA	Diisopropyl Adipate	STEARINERIE DUBOIS	11,00
А	PARSOL HMS	Homosalate	DSM	7,00
Α	PARSOL 840	Octocrylene	DSM	9,00
Α	PARSOL EHS	Ethylhexyl Salicylate	DSM	4,50
Α	UVINUL T 150	Ethylhexyl Triazone	BASF	4,20
А	UVINUL A PLUS GRANULAR	Diethylamino Hydroxybenzoyl Hexyl Benzoate	BASF	9,00
А	TINOSORB S	Bis-Ethylhexyloxyphenol Methoxyphenyl Triazine	BASF	2,70
В	COPHEROL 1250 C	Tocopheryl Acetate	BASF	0,20
В	PARFUM MONOI	Fragrance	H. REYNAUD & FILS	1,00

- Introduce the ingredients of the PHASE A in a vessel
- 2. Heat the blend under stirring at 100°C
- 3. At 100°C, stir for 30 minutes until the blend is completely uniform and

transparent

- 4. Cool to 80°C
- Add the ingredients of the PHASE B and homogenize
- 6. Pour into a mold or a suitable packaging

Clear sunstick

Apply sunscreen easily and evenly?

It's now possible thanks to the sunstick composed of 30% EstoGel®M and 10% EstoGel®Green for a balanced galenic. This transparent stick contains organic sun filters for UV protection and allows a perfect deposit. A film-forming veil is smoothly applied on the skin without sticky effect.

The skin is protected without effort.



Clear perfuned stick PolyMEREXPERT

PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	30,00
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	10,00
А	DUB 810	Coco-Caprylate/Caprate	STEARINERIE DUBOIS	40,00
В	PARFUM BOIS DE TONKA	Fragrance	MANE	20,00

- 1. Introduce the ingredients of the PHASE A in a vessel
- 2. Heat the blend under stirring at 100°C
- 3. At 100°C, stir for 30 minutes until the blend is completely uniform and transparent
- 4. Cool to 80°C
- 5. Add the fragrance and homogenize
- Pour into a mold or a suitable packaging

Clear perfuned stick

Perfume yourself discreetly with the perfumed stick. Discover a transparent stick with a sweet fragrance. This transparent stick is formulated by combining EstoGel®M and EstoGel®Green to obtain a flexible bullet and a perfect deposit. This convenient format is easy to carry around for fragrance without volatile compounds. The dry, velvety feel leaves a delicate sensation on the skin.



Healthy glow gel



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	4,00
А	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	29,60
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	40,00
В	RICE BRAN WAX	Oryza Sativa (Rice) Bran Wax		6,00
В	CANDELILLA WAX	Euphorbia Cerifera (Candelilla) Wax		7,00
В	GLYCERYL STEARATE	Glyceryl Stearate		1,00
В	CETIOL SB 45	Butyrospermum Parkii (Shea) Butter	BASF	5,00
С	SUNSIL 150 H	Silica	IMPAG	6,00
D	D&C RED 7 LAKE	CI 15850	MAPRECOS	0,58
D	D&C RED 6 LAKE	CI 15850	MAPRECOS	0,32
E	PARFUM VANILLE GOURMANDE	Fragrance	MANE	0,50

- 1. Introduce the ingredients of phase A in a beaker
- 2. Heat to 100°C with stirring
- 3. At 100°C, stir for 30 minutes
- 4. Cool to 85°C
- 5. Add the ingredients of phase B and homogenize
- 6. When the mixture is perfectly melted and homogeneous, introduce the silica and homogenize
- 7. Add the pigments and homogenize
- 8. Introduce the perfume and homogenize

Healthy glow gel

The Healthy Glow gel enhances the color of your lips while nourishing them. The EstoGel®M structures the gel and provides a texture that melts under the finger. Moreover, the use of EstoGel® allows to magnify a waxy product by bringing a pleasant and slippery touch. The application confers light and creamy feeling.

This product can be applied with a brush or clean finger. It can be used on the lips and cheeks for a healthy glow.







PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
РПАЗЕ	TRADE NAME	INCINAME	SUPPLIER	90
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	5,00
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	50,00
Α	LUSPLAN DD-DA7	Dimer Dilinoleyl Dilinoleate	UNIPEX	15,00
В	SWEET ALMOND OIL	Prunus Amygdalus Dulcis (Sweet Almond) Oil		23,00
В	MACADAMIA OIL	Macadamia Ternifolia Seed Oil		5,00
С	GROMWELL EXTRACTIVE	Helianthus Annuus (Sunflower) Seed Oil (and) Simmonsia Chinensis (Jojoba) Oil (and) Lithospermum Erythrorhizon Root Extract	BOTANICA	0,95
D	SUNSHINE SUPER GLITTER GOLD	Synthetic Fluorphlogopithe (and) Titanium Dioxide	MAPRECOS	0,05
Е	PARFUM VANILLE GOURMANDE	Fragrance	MANE	1,00

- Introduce the ingredients of phase A in a beaker
- 2. Heat to 80°C with stirring
- 3. At 80°C, stir for 20 minutes
- 4. Cool to 60°C

- 5. Add the ingredients of phase B and homogenize
- 6. Cool to 35°C
- 7. Add the ingredients of phase C, D and E and homogenize

Defying gravity

Defy gravity with this glittery and nourishing oil for shiny and sublimated lips. The use of EstoGel®Green brings body and viscosity to the oil complex. It also allows to put in «orbit» the glitter in this lipcare. The use in synergy of almond and macadamia oils brings nutrition and protects the lips while bringing comfort and softness.







PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL M	Castor Oil/IPDI Copolymer (and) Caprylic/Capric Triglyceride	POLYMEREXPERT	5,00
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	32,90
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	26,50
В	CETIOL ULTIMATE	Undecane (and) Tridecane	BASF	10,00
С	RICE BRAN WAX	Oryza Sativa (Rice) Bran Wax		9,00
С	CANDELILLA WAX	Euphorbia Cerifera (Candelilla) Wax		7,50
D	HAZELNUT BUTTER	Corylus Avellana (Hazelnut) Seed Oil (and) Hydrogenated Hazelnut Oil	NATUROCHIM	3,00
E	D&C RED 7 LAKE	CÍ 15850	MAPRECOS	3,05
E	FD&C YELLOW 5 LAKE	CI 19140	MAPRECOS	0,55
Е	SUNHINE BLUSH BRONZE	Synthetic Fluorphlogopite (and) Iron Oxides	MAPRECOS	2,00
F	PARFUM VANILLE GOURMANDE	Fragrance	MANE	0,50

- Introduce the ingredients of phase A in a beaker
- 2. Heat to 100°C with stirring
- 3. At 100°C, stir for 30 minutes
- 4. Cool to 85°C
- 5. Add the ingredient of phase B and homogenize
- 6. Add the ingredients of phase C and

homogenize

- 7. Add the ingredient of phase D and homogenize
- 8. When the mixture is perfectly melted and homogeneous, introduce the pigments and homogenize
- 9. Introduce the perfume and homogenize

Le Pouge

EstoGel®M is the new must-have for lipsticks with a high percentage of naturalness. It allows to find the glide and the coating formerly obtained on lipsticks formulated with raw materials of petroleum origin such as polyethylene waxes or ozokerite. The synergy of natural waxes and EstoGel®M will allow an improved application and a «super glide» on the lips. Discover the perfect alliance between performance and naturalness in this lipstick that will enhance your lips very naturally.







PHASE	TRADE NAME	INCL NAME	SUPPLIER	%
PHASE	TRADE NAME	INCI NAME	SUPPLIER	90
А	DEMINERALIZED WATER	Water		53,07
Α	EDTA	Disodium EDTA		0,05
Α	EUXYL PE 9010	Phenoxyethanol (and) Ethylhexylglycerin	DKSH / SCHULKE	0,50
Α	ETHANOL	Alcohol		4,97
А	TWEEN 20	Polysorbate 20		1,99
А	AROME MONOI	Aroma		0,50
А	SORITOL	Sorbitol		4,98
Α	GLYCERIN	Glycerin		5,22
В	DEMINERALIZED WATER	Water		25,00
В	EXPERTGEL EG312	Poloxamer 338 (and) PPG-51/SMDI Copolymer	POLYMEREXPERT	3,50
С	CIBAFAST H LIQUID	Sodium Benzotriazolyl Butylphenol Sulfonate (and) Buteth-3 (and) Tributyl Citrate	BASF	0,03
С	UNICERT RED K7057-J	Water (and) CI 14700	SENSIENT	0,19

- In a suitable container prepare a premix with the ingredients of the PHASE B
- 2. Introduce the ingredients of the PHASE A in the main vessel and homogenize
- 3. Add the PHASE B onto the PHASE A and homogenize

4. Add the ingredients of the phase C once the blend is perfectly uniform and homogenize

TIPS: Do not hesitate to use cold water to accelerate the solubilization of the ExpertGel

Liptint

This lip tint was formulated based on the observation that traditional lip inks are not pleasant to apply and tend to dry out the lips. The use of the ExpertGel® will allow to formulate a lip tint with a perfect definition and without migration. When applied, a homogeneous deposit is observed and coverage is much greater than with traditional lip inks. The use of ExpertGel® will make your lips fall in love with lip tint formulas and allows you to wear colored lips without discomfort.



Pituel du Tigre



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	3,00
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	34,00
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	33,00
Α	BEESWAX	Beeswax		8,00
Α	CETIOL SB 45	Butyrospermum Parkii (Shea) Butter	BASF	7,00
В	SATINER M5	Silica	SACI CFPA	5,00
С	MENTHOL	Menthol		5,00
D	HE ROSEMARY CAMPHOR			0,50
D	HE EUCALYPTUS			1,70
D	HE CLOVE			0,30
D	HE CAJEPUT			2,50

- 1. Introduce the ingredients of the PHASE A in a vessel
- 2. Heat up to 80°C under stirring
- 3. At 80°C, stir for 20 minutes until the blend is perfectly homogeneous
- 4. Cool down to 65°C under stirring

- 5. Introduce the silica and homogenize
- 6. Introduce the menthol and homogenize
- 7. Introduce the essential oils and homogenise
- 8. Pour into a suitable packaging

Pituel du Tigre

The association of EstoGel®Green with 100% natural waxes and oils allows to obtain a texture that imitates petroleum jelly and allows to create a texture equivalent to the original balm without using petroleum-based materials. EstoGel®Green gives consistency to the product without compromising on the massage thanks to its rheological properties. At the end of application, it leaves a light film on the skin to extend the action of the balm.

Directions for use: take a small amount with your fingers and warm it up between your hands. Apply on the painful zones by massaging firmly. Wash your hands after use.

Pituel Ayurvedique Polymerexpert

PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	2,00
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	46,00
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	44,00
С	MENTHOL	Menthol		5,00
D	HE ROSEMARY CAMPHOR			0,50
D	HE EUCALYPTUS			1,25
D	HE LAVANDER			1,25

- 1. Introduce the ingredients of the PHASE A in a vessel
- 2. Heat up to 80°C under stirring
- 3. At 80°C, stir for 20 minutes until the blend is perfectly homogeneous
- 4. Cool down to 60°C under stirring

- 5. Introduce the menthol and wait until it is perfectly solubilised
- 6. Cool down to 35°C under stirring
- 7. Introduce the essential oils and homogenize
- 8. Pour into a suitable packaging

Pituel Ayurvedigne

This roll-on treatment combines EstoGel®Green, which gels the oils transparently, with castor oil and essential oils to create a complete treatment. The galenic design makes it possible to obtain a transparent and easy-to-apply ritual by sliding the ball onto the skin. Thus, the application is precise for a targeted care and its format makes it possible to bring freshness thanks to the joint action of the ball and menthol. The film-forming properties of EstoGel®Green extend the benefits of this ritual for deep soothing.

By gelling this oil of massage, EstoGel[®] Green makes it possible to texture the oily complex while avoiding a loss of the product through a fast delivery.



Pituel d'Orient



PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	4,00
Α	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	17,50
Α	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	30,00
Α	CETIOL OE	Dicaprylyl Ether	BASF	20,00
Α	BEESWAX	Beeswax		8,00
В	ARGAN OIL	Argania Spinosa Kernel Oil		10,00
В	CETIOL ULTIMATE	Undecane (and) Tridecane	BASF	10,00
С	PAPRIKA BIO EXTRACTIVE	Helianthus Annuus Hybrid Oil (and) Capsicum Annuum Fruit Extract (and) Rosmarinus Officinalis Leaf Extract	BOTANICA	qsp
D	DOUCEUR D'ORIENT	Fragrance		0,50

- Introduce the ingredients of the PHASE A in a vessel
- 2. Heat up to 80°C under stirring
- 3. At 80°C, stir for 20 minutes until the blend is perfectly homogeneous
- 4. Cool down to 60°C under stirring
- 5. Introduce the PHASE B and homogenize

- 6. Cool down to 35°C under stirring
- 7. Introduce the colorant and homogenize
- 8. Introduce the fragrance and homogenize
- 9. Pour into a suitable packaging

Pituel d'Orient

Discover in this oriental ritual, a milky oil combining EstoGel®Green and a complex of oils to provide an elegant texture to coat the hair and distribute evenly the precious Argan oil on the hair.

The technology of EstoGel®Green allows in this hair ritual to seal open cuticles, repair split ends, smooth hair fibers but also enhance the shine and provide a lasting and perceptible repair to the touch.

Let yourself be carried away by the notes of orange blossom and amber vanilla for a trip to the heart of the Medina and enjoy a reminiscent touch of the sweetness of the Orient.

Directions for use: Put a few drops of this exlir in your hands and apply on the hair, insisting on the ends.







PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	ALOE WATER	Aloe barbadensis leaf water		2,40
Α	SPECPURE GBE001	Chlorophyllin-Copper Complex	MAPRECOS	qsp
В	SUGAR	Sucrose		57,60
С	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	2,00
С	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	15,50
С	CASTOR OIL	Ricinus Communis (Castor) Seed Oil	HUILES BERTIN	14,00
С	BEESWAX	Beeswax		3,60
С	CETIOL SB 45	Butyrospermum Parkii (Shea) Butter	BASF	2,80
С	ISOLAN GO 33	Polyglyceryl-3 Oleate	EVONIK	2,00
D	HE LEMON LISTERIA			0,10

- 1. Solubilise spirulina in water
- 2. Wet the sugar with the spirulina solution and mix
- 3. Introduce the ingredients of the Phase C in a beaker and heat up to 80°c under stirring
- 4. At 80°C, stir for 20 minutes until the blend is perfectly homogeneous

- 5. Cool down under stirring
- 6. Introduce the essential oil around 35°C and homogenize
- 7. Blend together the balm and the sugar

Pituel Marin

This ritual combines the benefits of spirulina and aloe vera in a fresh exfoliating scrub. Aloe Vera provides moisturizing, healing and softening properties. It repairs the epidermis and protects it from the micro-aggressions that the skin undergoes daily. Used in association with spirulina, this exfoliant revitalizes the skin thanks to the grains of sugar (or salt). Finally, the green color of this care is naturally obtained by the presence of spirulina. This one allows to correct the imperfections of the complexion without coloring the skin. The EstoGel®Green comes here to bind the ingredients in a balm easy to pick up.

Directions for use: Sugar scrub - take a small amount and massage the lips for exfoliation. Salt scrub - apply a small amount to the face and massage gently, avoiding the eye area. Rinse your skin after use.

Pituel de la Peine de Sapa

PHASE	TRADE NAME	INCI NAME	SUPPLIER	%
Α	DEMINERALISED WATER	Water		68,30
Α	PRESERVATIVES	Preservatives		1,00
В	GLYCERINE	Glycerin		3,00
В	RHODICARE T	Xanthan Gum	SACI CFPA	0,20
С	ESTOGEL GREEN	Hydrogenated Castor Oil/Sebacic Acid Copolymer	POLYMEREXPERT	2,00
С	LABRAFAC CC	Caprylic/Capric Triglyceride	GATTEFOSSE	6,00
С	CETIOL OE	Dicaprylyl Ether	BASF	5,00
С	MORINGA OIL	Moringa Oleifera Seed Oil		5,00
С	CETIOL SB 45	Butyrospermum Parkii (Shea) Butter	BASF	5,00
С	MONTANOV 68 MB	Cetearyl Alcohol (and) Cetearyl Glucoside	SEPPIC	4,00
D	FRANGIPANI	Fragrance	PACIFIQUE SUD	0,50

- 1. Introduce the ingredients of the PHASE A 5. in the main vessel
- 2. Prepare a premix of xanthan gum and glycerin and add the PHASE B into the PHASE A under stirring
- 3. Heat up the PHASE A+B at 80°C under stirring
- 4. Introduce the ingredients of the PHASE C in a secondary beaker

- 5. Heat up the PHASE C to 80°C under stirring
- 6. At 80°C, stir for 20 minutes until the blend is perfectly homogeneous
- Make the emulsion adding PHASE C to PHASE A+B and stir vigorously for 15 minutes
- 8. Cool to 35°C under stirring
- 9. Introduce the fragrance and homogenize
- 10. Pour into a suitable packaging


Pituel de la Peine de Salpa

Thanks to the combination of Shea butter and Moringa oil, key ingredients of African beauty, this richly gentle treatment nourishes your skin without making it greasy, while strengthening it. Like the Queen of Sheba, this treatment combines power and softness in a dense and enveloping texture.

The use of EstoGel®Green in this formula stabilizes the emulsion and gives it a filmogenic effect. The skin is covered with a protective satin veil to allow a hydration throughout the day. EstoGel®Green is your new weapon to reinforce the stability of your emulsions while bringing comfort to


the application.


Directions for use: Take in the hand a small amount of cream and apply it in a uniform way on the face by massaging gently for an optimal penetration.

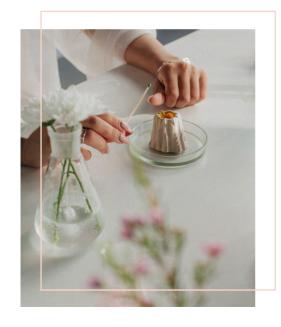




_
 _
 _
 _
 _
 _
_
_
_
 _

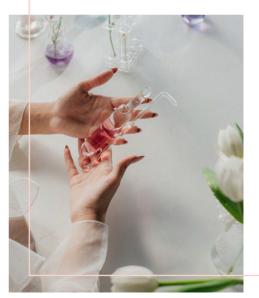

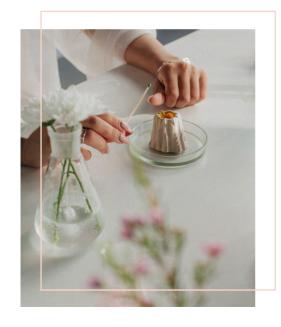



 _
_
 _
_
 _
 _
_

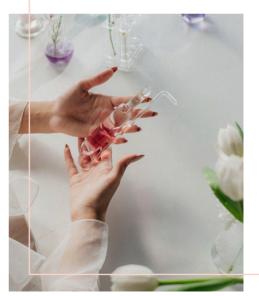



Disclaimer

All informations and recommandations contained herein are the best of our reliable knowledge. No warranty or guarantee is expressed or implied regarding the accuracy of such data. Nothing herein is to be construed as a warranty or representation in respect of safety in use, suitability, and efficacy or otherwise including freedom from patent infrigement. Users should make their own test for their particular purpose. PolymerExpert cannot accept any liability for any loss, damage, or infrigment arising from the use of the information and recommendation contained here in.

Those formula are presented to you as an indication of the potential use of its ingredients in the state of our knowledge of them: it is subject to your appreciation, in particular as to the need for modifications, tests or controls. NO WARRANTY is given as to its suitability for your conditions of use, nor as to the use, merchantability or regulatory compliance of the resulting products, for which you alone remain responsible; it is your responsibility to ensure that this formula and its use do not infringe any intellectual property rights.









Contact Us

contact@polymerexpert.fr +33 (0)5 56 04 02 00 soie.polymerexpert.fr



